

SCENE SET PLATE REMOTE



The ecoLUX 'Hand held Scene Plate' remote performs the functions of a scene set control plate. This is used with our plug in and hardwired control modules to control different lighting groups at different levels as well as some other non-lighting functions, such as electric blinds.

The remote requires no commissioning, but requires a programmed scene set control plate to function with.

Part Number:


LC-HHI/R-SSP

7 Button

Other formats on request

LC-HHI/R-CRA

Cradle

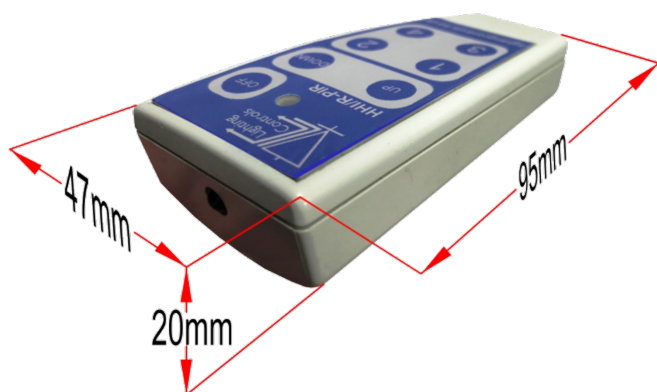

ECOLUX DATASHEET

- Available in any format up to 7 button
- Programmed for use as 'hand held scene plate'
- Cradle for wall mounting if required.
- Can call scenes 1-4 /raise /lower and off.
- Extra scene recall by holding buttons 1-4
- Allows the end user full control of lighting levels.

Programming

Working with any Lighting Controls Ltd scene set control plate, the seven buttons on this remote mimic the buttons on the scene set control plate. Using the remote you can call Scenes 1 - 4, Raise, Lower, and Off. The Off button can also be programmed to a scene value. By pressing and holding buttons 1 - 4 you call scenes 5 - 8.

Supply/Battery	2 x 3V AAA Alkaline Battery
Material	ABS Flame Retardant
Humidity	90%CH (non-condensing)
Working Temperature	-10 to +70°C
Max Number Buttons	7

IMPORTANT: Information contained in this datasheet is subject to change at any time without notice.
Installation guides are available on our website (www.lightingcontrols.ltd.uk) or call us on 01252 470 027.